 


# Remote controller

## GENERAL INFORMATION

This remote controller is designed for 3-speed ceiling fan to separately control your ceiling fan speed and light brightness. There are four buttons (HI, MED, LOW, OFF) to control fan speed and on/off function. The light dimmer button will control the light brightness dimmer and off (The dimming function is only applicable to dimmable LED lights and incandescent bulbs).

3-Speed Control  
HIGH/MED/LOW/ FAN OFF  
Light Dimmer  
ON/OFF/DIMMING  
Blue Indicator  
Learn Key

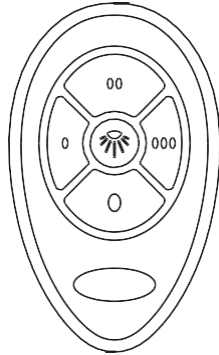

TRANSMITTER

MODEL: FAN-35T



THANK YOU

 
If you have any questions, please feel free to contact us first. We are always here for you.

## INSTRUCTION OF INSTALLATION AND OPERATION


### 1. SETTING THE CODES

This unit has 16 different code combinations. To set the codes, perform the following steps:



- Setting the codes on the transmitter:
  - Remove battery cover. Press firmly on the arrow and slide battery cover off.
  - Adjust the DIP dial to be consistent with the old remote control (Figure 1).
- When the old remote is lost:
  - Disassemble the ceiling fan base and check the DIP dial of the receiver inside (Picture 2).
  - Adjust the DIP dialing code of the remote control to be consistent with the DIP dialing code of the receiver.
- When the remote control and receiver do not have DIP dialing (Picture 3):
  - Turn on the ceiling fan after disconnecting the power supply for 5 seconds.
  - Long press the "learn" button for 5 seconds, the ceiling fan light will flash twice.

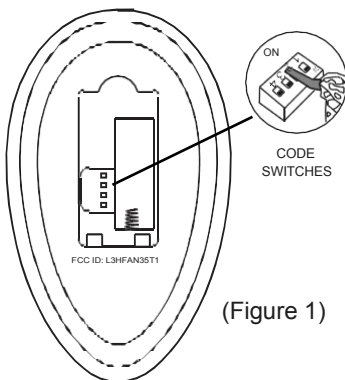

(Figure 1)

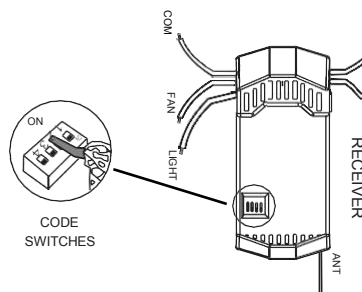 

(Figure 2)

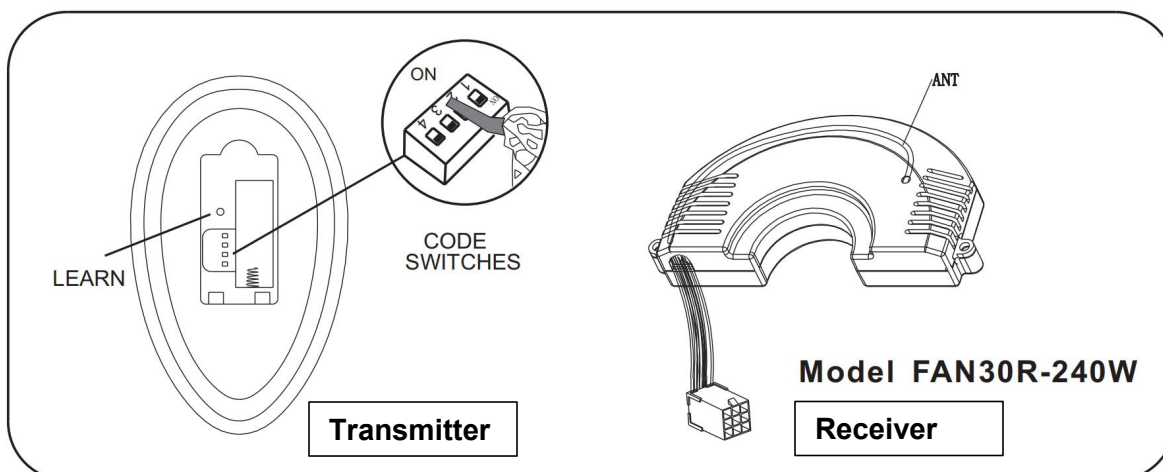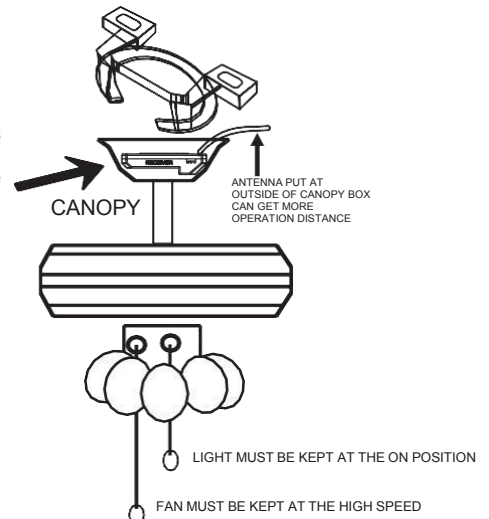  


(Figure3)

## 2. OPERATING TRANSMITTER:

 - A. Install 12 volt 23A battery(not included). (To prevent damage to transmitter, remove the battery if not used for a long time).
- B. Store the transmitter away from excessive heat or humidity.
- C. This remote control unit is equipped with 16 code combinations. In order to prevent possible interference from or to other remote units such as garage door openers, car alarm or security system. If you find that your fan and light kit go on and off without using your remote control, simply change the code combination in your transmitter and receiver.
- D. Operating the buttons on the panel of the transmitter.
  - HI key -for fan high speed.
  - MED key-for fan medium speed.
  - LOW key-for fan low speed.
  - OFF key-for fan off.
  - LIGHT key-Long press to adjust the brightness, short press to adjust the switch.


★ The receiver can remember the last status of the light brightness when the light was switched.

## YOUR REMOTE NOW HAS FULL CONTROL OF THE FAN AND LIGHT.

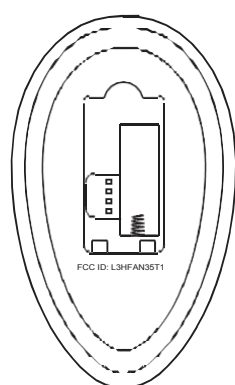

23A 12V

 OPERATION DISTANCE 20 FEET

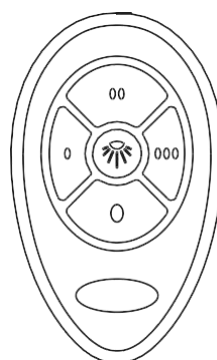

MODEL:  
FAN-35T

### "Optional Wall Mounting for Transmitter Holder"

Place in accessible area of your home, and screw the transmitter holder into wall using the two screws provided, slide hand unit into holder.

TRANSMITTER

## 3. TROUBLE SHOOTING GUIDE

1. Fails to operate
  - a. Power to receiver ?
  - b. Receiver wired correctly ?
  - c. Fan manual speed control in highest position ?
  - d. Light kit switch turned on ?
  - e. Good battery in the transmitter ?
  - f. Code set at exact same positions in both transmitter and receiver ?
2. Won' t operate at distance
  - If transmitter operates fan/light kit when up close, but not at 20 feet away.
  - Try placing the brown antenna wire higher, up through ceiling/outside the junction box.

### NOTICE !

Your ceiling fan and light kit assembly must meet the following requirements:

1. Do not use with solid state fans.
2. Electrical rating: 120v 60Hz 3.5A
  - MAX. Motor amps: 1.0
  - MAX. Light watts: 240-(dimmable LED or incandescent only)

## 4. WARRANTY POLICY

If your receiver in ceiling fan came from another manufacturer, this transmitter may not work. Please contact us for details about the original receiver. It is recommended to purchase our controller Kit (including transmitter and receiver).

1 year warranty and free 1 month replacement (non-human damage). For more information. please contact the customer service of the store you purchased, or mail to: [Support@ceilingfanremote.com](mailto:Support@ceilingfanremote.com).