



Remote Controller GENERAL INFORMATION

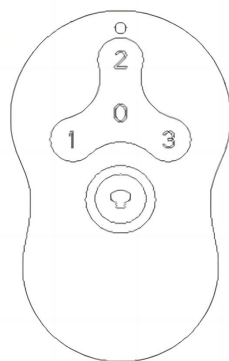

Remote
Qty. 1

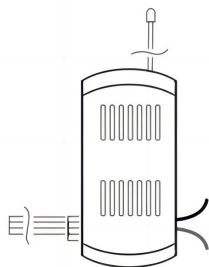

 
Receiver
Qty. 1



Wire Connector
Qty. 6



Mounting Screw
Qty. 2



Owner's Manual
Qty. 1

This remote control is made for 3-speed AC ceiling fans. If your ceiling fan is a 6-speed DC model, it cannot be used as a replacement.

INSTRUCTION OF INSTALLATION AND OPERATION

- Do not install in damp locations. For indoor use only.
- Do not use with fans that have integrated remote controls.
- Do not use with hugger-style fans.
- Be sure the outlet box is properly grounded or that a green or bare (ground) wire is present.
- This unit is intended to control a ceiling fan with electrical source of AC 110/120V, 60Hz.
- To reduce the risk of fire or electric shock, do NOT use a full-range dimmer switch to control the fan speed.



ASSEMBLY INSTRUCTIONS

▲ DANGER: Failure to disconnect power supply prior to installation may result in serious injury or death.

1. Turn off circuit breakers and wall switch to the fan.
2. Lower the canopy of the previously assembled fan and insert receiver into the mounting bracket with antenna end first and the flat side facing the ceiling.

3.CONNECT TO

Red receiver wire(AC IN L)..... Red supply wire
White receiver wire(AC IN N)..... White supply wire
White receiver wire(TO MOTOR N).....White com(FAN/LIGHT N) wire
Black receiver wire(TO MOTOR L)..... Black fan wire
Blue receiver wire(TO LIGHT L)..... Blue light wire

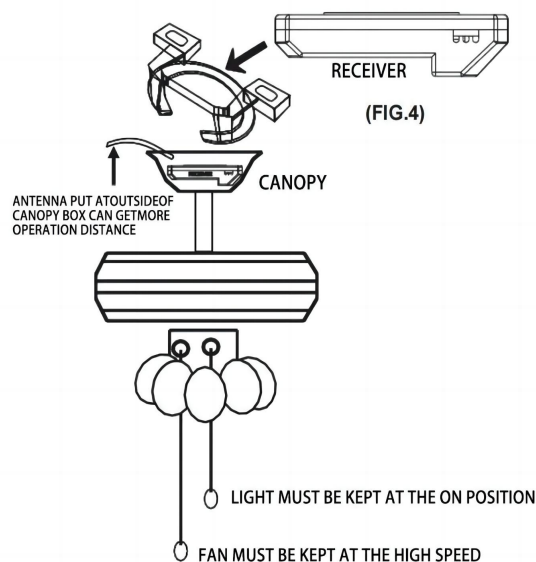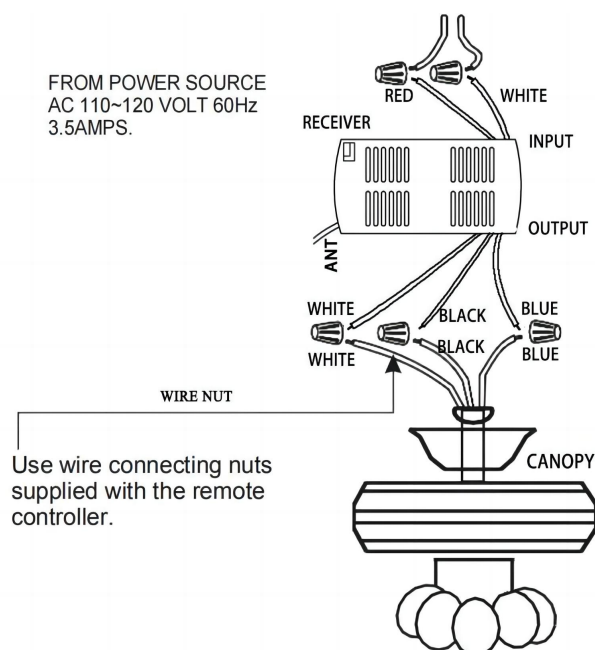

4. Place a wire nut or electrical tape (not included) around each wire connection. Then push the receiver into the outlet box.
5. Reinstall the canopy.
6. Turn on the ceiling fan power supply. If there is a wall switch or pull chain switch, you need to adjust it to maximum fan speed and maximum brightness, otherwise the remote control will not work properly.
7. Use a Phillips screwdriver (not included) to remove the battery cover from the back of the remote control. Install a CR2032 battery into the remote control; make sure the positive side of the battery is facing up. Press the HIGH SPEED button to ensure the LED indicator illuminates and the fan turns on.
8. If desired, the wall bracket can be attached to a wall using the mounting screws.

Install battery

Use a Phillips screwdriver (not included) to remove the switch cover, then insert the battery as shown in Figure 1. Use a 3V CR2032 battery.

Learning Mode

The remote and receiver are already paired one-to-one by default at the factory, so they are ready to use right away.

If you need to control additional receivers, follow these steps: (Note: One remote can control multiple receivers, but a single receiver can be controlled by a maximum of two remotes.)

1. Turn off the power to your ceiling fan for 5 seconds, then turn it back on.
2. Within 1 minute of turning it on, press and hold the 'Learn' button inside the remote's battery compartment.
3. Pairing is successful when the ceiling fan light blinks twice.

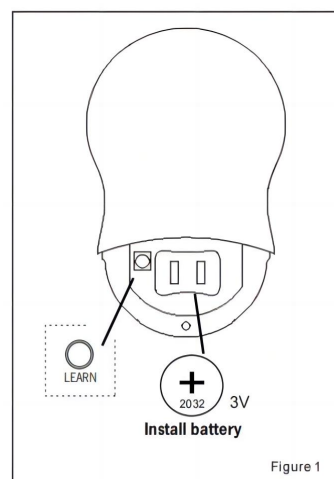


Figure 1

Operating Transmitter

Your remote now has full control of the fan and light.

Fan speed

- 1 = low speed
- 2 = medium speed
- 3 = high speed

Press the O button to turn fan off.



Press this button quickly to turn light on or off. To dim light, hold down the button, the light will cycle from bright to dim to bright until button is released.


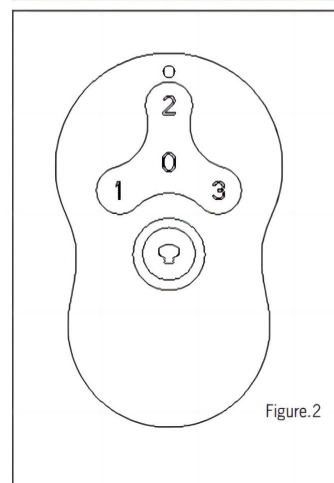


Figure.2

Link to App

Step 1:Download App

Download the Smart Life APP from App Store or Google Play on your smart device.

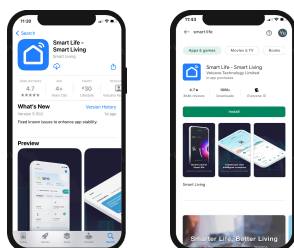


Or Scan the QR Code to Download.




Step 2:Register


1 Register and Log in to Your Account.

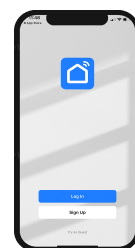

2 Make sure that your Wi-Fi and Bluetooth are enabled when using the Smart Life APP.

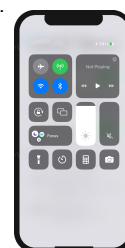


Step 3:Add Device

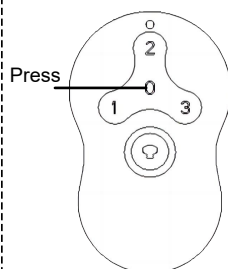


First, you need to reset the fan: turn off the fan power at the wall switch/electrical box for 5 seconds and then turn it back on. Within 30 seconds of turning it on, press and hold the "0" button for 5 seconds to reset it. If the reset is successful, the indicator light will flash, and then follow the steps to add the device.

If the fan is turned on for more than 2 minutes, you will not be able to search for the device and need to repeat the above steps.


1 Select "Add Device" or Click the "+" in the Upper Right Corner.

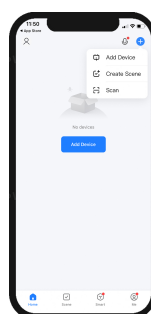


2 Find the Fan Device, Click to "ADD" Keys.

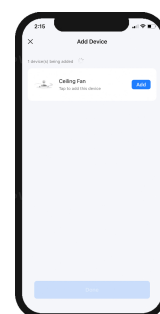


3 Connecting to the Internet ,Click to "NEXT" Keys.
(Do not use 5G network for the first pairing.)

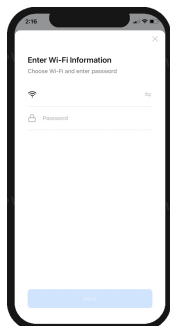


4 Waiting for Devices to Connect.

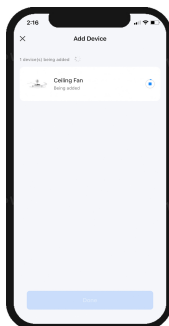

5 After you have edited and saved the product name,click "DONE" at the underneath right to complete setup.

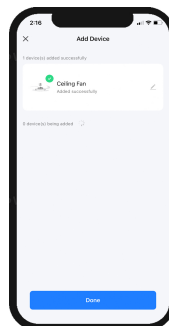


6 Device added successfully.

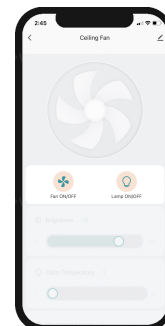


Link Skill to Alexa or Google Assistant

Alexa Setup Steps


1 In the "Me" in the lower right corner of the Smart Life APP, find Alexa

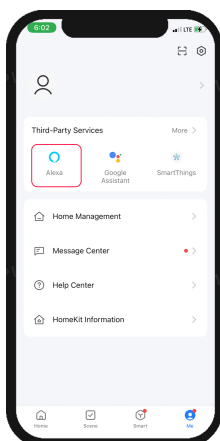

2 Click "Link to Amazon Alexa"

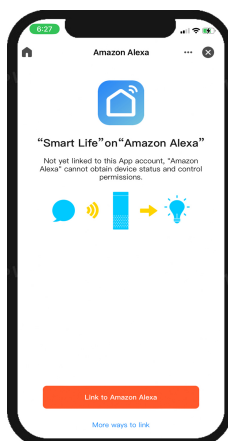


3 In the App,change the name of the device to an easily identifiable name such as bedroom light,bed room fan.

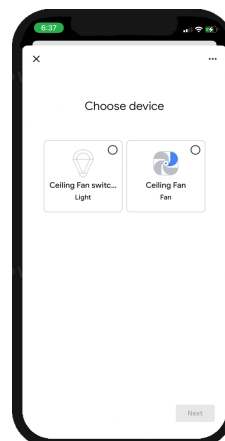


Common Voice Commands (amazon alexa)
"Alexa, turn on <device name>"
"Alexa, turn off <device name>"
"Alexa, set the <device name> to fifty percent."
"Alexa, set the <device name> to speed 1"

Google Assistant Setup Steps


1 Device added successfully.

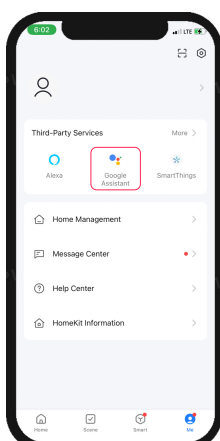

2 Device added successfully.

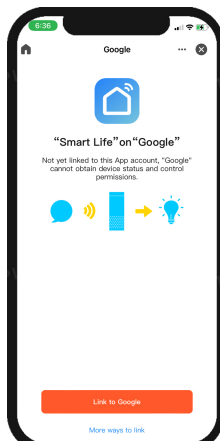

3 Device added successfully.

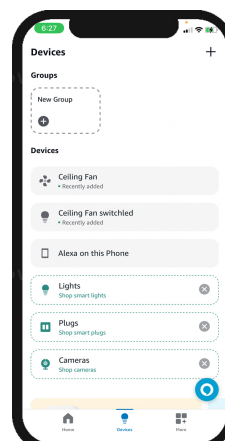

Common Voice Commands (Google Assistant)
"OK Google, turn on <device name>"
"OK Google, turn off <device name>"
"OK Google, set the <device name> to fifty percent."
"OK Google, set the <device name> to speed 1"

TROUBLESHOOTING

LED indicator on the remote illuminates, but the remote won't control the fan. The remote may need to be re-synced.

The remote is synced to the receiver at the factory. Occasionally, power surges can cause the remote to become un-synced. Whenever necessary, follow the syncing instructions below.

SYNCING INSTRUCTIONS: Switch the power to the fan off and back on again. Within 30 seconds, press and hold the HIGH SPEED and LOW SPEED buttons (or the "LEARN" button, located in the battery compartment) for 5 seconds. Fan will turn on at low speed and light off. This confirms the syncing process is successful.

The LED indicator on the remote does not illuminate.

The battery most likely needs to be replaced or it is not oriented correctly in the battery compartment. If battery is depleted rapidly, please replace the battery in a timely manner.

The LED indicator stays on.

Ensure one of buttons is not stuck in the down position.

Remote controls more than one fan.

Turn off the power to the fans you don't want synced. Follow the syncing instructions listed above. Then, turn on the power to the other fans

Dimming feature does not function.

Ensure the bulbs are incandescent or other dimmable bulbs

Fan will not run at high speed.

If your fan has manual pull chains to operate the fan speed, be sure the pull chain is manually set to HIGH SPEED. If your pull chain is set to LOW or MEDIUM SPEED, the remote will not override the manual pull chain setting.

Light will not turn on.

If your fan has manual pull chains, be sure the light pull chain is set to ON. The remote will not override the manual pull chain setting.

Won't operate at distance

If transmitter operates fan/light kit when up close, but not at 20 feet away.

Try placing the brown antenna wire higher, up through ceiling/outside the junction box.

Warranty Policy

1 year warranty and free 1 month replacement (non-human damage). For more information, please contact the customer service of the store you purchased, or mail to: **support@ceilingfanremote.com**.



THANK YOU !

If you have any questions, please feel free to contact us first. We are always here for you.