

# Remote Control

## CEILING FAN REMOTE CONTROL

SKU: 071-02

MODEL: RC-71T

### Thermostatic Ceiling Fan Remote Control




Questions, problems, missing parts?  
Before returning to the store, please contact our customer service.  
Email: [support@ceilingfanremote.com](mailto:support@ceilingfanremote.com)

### Warranty

The supplier warrants the remote control to be free from defects in workmanship and material present at time of shipment from the factory for a period of one year after the date of purchase by the original purchaser. We agree to correct such defects without charge or at our option replace with a comparable or superior model if the product is returned. To obtain warranty service, you must present a copy of the receipt as proof of purchase. All costs of removing and reinstalling the product are your responsibility. Damage to any part such as by accident or misuse or improper installation or by affixing any accessories, is not covered by this warranty. Servicing performed by unauthorized persons shall render the warranty invalid. There is no other express warranty. We hereby disclaims any and all warranties, including but not limited to those of merchantability and fitness for a particular purpose to the extent permitted by law. The duration of any implied warranty which cannot be disclaimed is limited to the time period as specified in the express warranty. Some states do not allow a limitation on how long an implied warranty lasts, so the above limitation may not apply to you. The retailer shall not be liable for incidental, consequential, or special damages arising out of or in connection with product use or performance except as may otherwise be accorded by law. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives specific legal rights, and you may also have other rights which vary from state to state. This warranty supersedes all prior warranties. Shipping costs for any return of product as part of a claim on the warranty must be paid by the customer.

### Easy to Pair Remote Control



The HD3 Handheld Control requires an installed compatible receiver to function. Please follow the installation instructions included with the receiver prior to setting up your Handheld Control.

**If you are installing multiple remote-controlled fans on the same circuit breaker,**

you may need to perform a few extra steps to prevent interference your faulty operation of our remote controls.

For more information, please contact the customer service of the store you purchased, or mail to: [support@ceilingfanremote.com](mailto:support@ceilingfanremote.com).

### Setting the codes on the remote control and receiver

**【Easy to Pair】** It was easy to program to ceiling fan. There are 3 ways to pair your new ceiling fan remote.

1. Match DIP switches settings from your old remote to your new remote.
2. If you don't have your old remote, try the 16 possible DIP switches combinations.
3. Find the DIP switches settings on the receiver insider your ceiling fan and match them on your new remote.

**NOTE:** The battery will weaken with age and should be replaced before leaking takes place as this will damage the hand unit. Dispose of the used battery properly and keep the battery out of the reach of children.

**NOTE:** It is imperative that the code used for both transmitter and receiver is exactly the same, otherwise remote controller will not work.

### Setting the Code on the Remote

- Remove the battery cover on the back of the remote control (A) by pressing firmly on the arrow and sliding the cover off.
- Slide the code switches to your choice of either up or down. The factory setting is up.
- From the factory, the remote displays °F, press °C/°F button once to change settings to °C.
- For fans with dimmable bulbs, slide the dip switch O/D to the position marked "D", if you are not using dimmable bulbs slide the dip switch to the "O" position.
- Install 2 AAA batteries (Not Included)
- Replace the battery cover on the remote control (A)

## The Function of Remote Control


### Operating the remote control

- ⏻ - Press and release the ⏻ button to turn the fan and the lights on or off.
  - Press and hold the ⏻ button for 3 seconds to use the "walk away time delay"; this will activate the light for 30 seconds (if you are using dimmable bulbs the light will be activated at 50% brightness).
- 🌀 - Press and release this button to switch the fan speed of high / medium / low / off.
- 🌊 - Press and hold this button for 3 seconds to enable Comfortable Breeze, this will change your fan speed randomly, simulating a relaxing breeze. To cancel this feature press 🌀 or ⏻.
- 🕒 - Press and release this button to switch the timer of 2 hour / 4 hour / 8 hour.
- FAN AUTO - This setting allows the fan to automatically turn on and off at a previously set room temperature.
  - ▲ - Press 1 time to adjust the set temperature + 1°, press and hold to raise the set temperature multiple degrees.
  - ▼ - Press 1 time to adjust the set temperature - 1°, press and hold to lower the set temperature multiple degrees.
  - The temperature range that can be set is 15°C - 37°C / 59°F - 99°F.

88- Digital display shows the set temperature when ▲ or ▼ is pressed.

- 💡 - Press and release the 💡 button to turn the light on or off.

If you are using dimmable bulbs and you have previously set O/D dip switch in your remote to the "D" position, press and hold the 💡 button to activate the dimmer function.

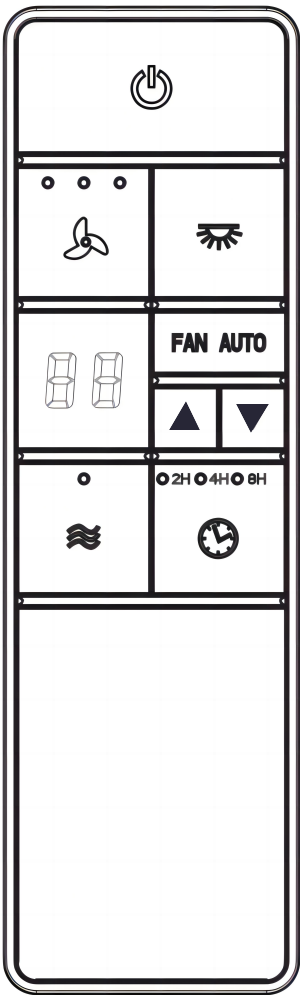

## Troubleshooting

### The fan will not start

- Check the main and branch circuit fuses or breakers.
- Check to make sure the wall switch is in the on position if applicable.
- Check the line wire connections to the fan and switch wire connections in the switch housing.
- Check the battery in the transmitter.
- Ensure you are in the normal range of 10-20 ft (3-6m).
- Ensure the dip switch settings are the same on the transmitter and receiver.
- Remember to turn off the power supply before checking the dip switches settings.

