

# Remote Control

CEILING FAN REMOTE CONTROL  
SKU: 082-02  
MODEL: RC-82T



## Read and Save These Instructions

### ⚠️ WARNINGS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Note: Any changes or modifications to the transmitter or receiver not expressly approved by our Company may void one's authority to operate this remote control. Chemical burn hazard. Keep batteries away from children.

This remote use a lithium button cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Dispose of cells properly and keep away from children. Even used cells may cause injury.

## Installation



The Hunter Handheld Control requires an installed compatible receiver to function. Please follow the installation instructions included with the receiver prior to setting up your Handheld Control.

**If you are installing multiple remote-controlled fans on the same circuit breaker,**

you may need to perform a few extra steps to prevent interference or faulty operation of your remote controls.

For more information, please contact the customer service of the store you purchased, or mail to: [support@ceilingfanremote.com](mailto:support@ceilingfanremote.com).

### 1 Turning off the power

Before installation, use the pull chains to set the fan speed to HIGH and the light to ON. Ensure the power is OFF at the outlet box and wall switch location before proceeding with installation.



### ⚠️ WARNING

 


To avoid possible electrical shock, before installing your fan, disconnect the power by turning off the circuit breakers to the outlet box associated with the wall switch location.

### 2 Installing the battery


To access the battery compartment, remove the small Phillips head screw that secures the battery door to the remote control.

Replace the used battery with a CR2032 battery when necessary. The battery should be installed with the positive (+) side up.

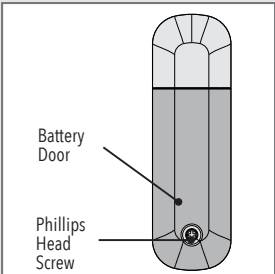

### 3 ⚠️ IMPORTANT

 
#### Turning on the power

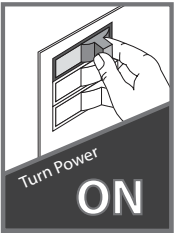

### 4 Pair the remote with a compatible receiver.

**Note:** To pair your remote, remove the battery door. Cycle power to the fan by turning power off and back on at the wall switch (or circuit breaker if necessary). Within three minutes, press the pair button on the remote.

 **To prevent faulty operation, please disconnect power from all other ceiling fans within range while pairing.**

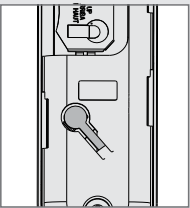

## Remote Cradle

Remove the remote from the cradle bracket.



## Using screws

Choose your cradle installation location.

*If you are installing into drywall, drill two 9/64 width holes using the cradle bracket as a guide. Gently hammer the included drywall anchors into the pre-drilled holes.*



Install the cradle bracket to the wall with the included screws.

Slide the cradle onto the mounted bracket.



## Compatible

• Compatible with **Hunter** and **Casablanca** ceiling fans, as well as other brands.

• Replace Hunter 99813, 99392, 99770, 99123, 99122, 99119, 99118; 99198 Casablanca Remote...

• The frequency of this remote is 434MHz. If your ceiling fan is 3 Speed and works at the frequency 434MHz, then our remote can work for your ceiling fan.

## Remote Functions

### Key Press

### Function



+ Quick Press

Light On/Off



+ Long Press

Light Dimming



+ Quick Press

Fan On/Off



+ Quick Press

Raise Fan Speed



+ Quick Press

Lower Fan Speed

Long Press



Fan High

Long Press



Fan Low

Long Press



Dimming Mode On/Off

## Troubleshooting

### Remote Control of Fan is Erratic

- Make sure the battery is installed correctly.
- Install a fresh battery.

### Multiple Remote Issues

- If you have multiple remotes or multiple remote-controlled fans installed on the same circuit breaker and you are experiencing interference or faulty operation of your remote controls, please contact the customer service of the store you purchased, or mail to: [support@ceilingfanremote.com](mailto:support@ceilingfanremote.com)
- Our website is: [www.ceilingfanremote.com](http://www.ceilingfanremote.com)